PREMIER®

MANUAL DE INSTRUCCIONES

SECADOR DE PELO

SE-2370IC

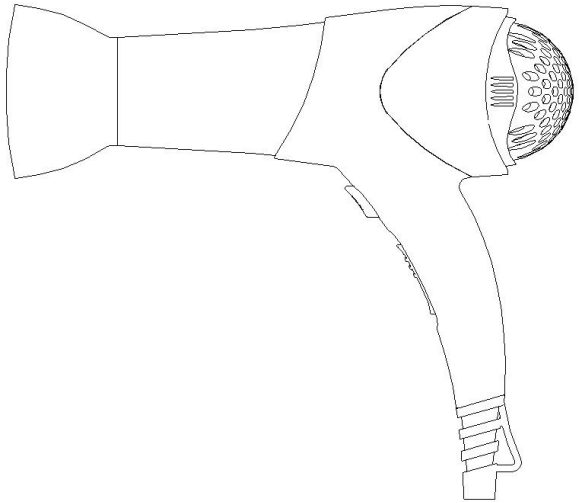

ESTIMADO CLIENTE

¡Felicitaciones por su compra!
Por favor lea cuidadosamente este manual, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ESPECIFICACIONES

Voltaje	120V
Frecuencia	60Hz
Potencia	1800W

INSTRUCCIONES

1. Antes de conectar el secador asegúrese que esté en la posición “0”.
2. Utilice la temperatura alta para secar el cabello y la temperatura baja para crear un estilo.
3. Si el secador se detiene por alguna razón, apáguelo y deje que se enfríe.
4. Ajuste la temperatura de la siguiente forma:

- Posición 0: Apagado.
- Posición 1: Potencia media, temperatura media para secado suave y creación de estilo.
- Posición 2: Potencia alta, temperatura alta para secado rápido.

COOL SHOT (GOLPE FRÍO)

Con este botón es posible interrumpir el proceso de calentamiento para que el aire pueda ser mezclado de acuerdo con sus propias necesidades.

EMISIÓN DE IONES

Este secador cuenta con la mejor tecnología de **iones** la cual emite iones negativos mientras seca su cabello con el fin de eliminar la electrostática de su cabello y dar un acabado mucho más suave.

MANTENIMIENTO

- Mantenga el secador limpio para un buen funcionamiento.
- No bloque la salida de aire para evitar el sobrecalentamiento.
- El secador no requiere ningún tipo de lubricante.
- Recuerde que no hay partes internas para ser manipuladas por el usuario. Cualquier revisión o reparación que necesite debe ser hecha por personal técnico autorizado.
- Mantenga en buen estado el cable de poder; no lo doble ni lo enrolle alrededor del secador para guardarlo, ni permita que el secador cuelgue de él.
- Estire el cable antes de comenzar a utilizar el secador.
- Guarde el secador en lugar seguro y seco, fuera del alcance de los niños.

LIMPIEZA

1. Desconecte la unidad antes de limpiarla.
2. Utilice una prenda húmeda suave y pásela por encima.
3. Evite utilizar productos químicos como benzina, tiner o alcohol que pueden dañar el acabo del secador.
4. Retire los cabellos que pueden quedar atrapados en la boquilla con una aspiradora o manualmente. Si el filtro de esta área está muy sucio el secador puede sobrecalentarse.

NOTA
Nunca introduzca el secador en agua para limpiarlo.

PRECAUCIONES

Al manipular artículos eléctricos se deben seguir algunas normas de seguridad para evitar el riesgo de electrocución, incendio o quemaduras. Lea atentamente estas instrucciones.

- Desconecte siempre la unidad después de utilizarla.
- No la utilice mientras se baña.
- No la deje en una ubicación donde pueda caerse al sanitario o al lavamanos.
- No la sumerja en el agua ni en ningún líquido.
- Si llega a caer dentro del agua, por ningún motivo intente recogerla. Desconéctela de inmediato.

- Mantenga su atención en la unidad cuando la esté utilizando.
- Mantenga estricta supervisión si se utiliza la unidad en o cerca de niños, personas con discapacidad o personas de la tercera edad.
- Utilice esta unidad para el propósito que ha sido diseñada.
- No use la unidad si observa que el cable tiene algún daño, si no está funcionando o ha caído en un recipiente con agua. Remítase a un centro de servicio autorizado para revisión y reparación.
- Mantenga el cable alejado de fuentes de calor.
- No bloquee la de aire ni la coloque sobre una superficie donde se puedan bloquear, como por ejemplo, la cama y el sofá.
- No la utilice mientras duerme.
- No introduzca objetos dentro de la unidad.
- Evite dirigir el aire caliente hacia los ojos y otras partes sensibles del cuerpo.
- Los accesorios pueden calentarse durante la operación. Permita que se enfríen para manipularlos.
- Para protección adicional en cuanto a electricidad se recomienda instalar un dispositivo de corriente residual (RCD) que no exceda los 30 mA. Consulte a un electricista para este procedimiento.

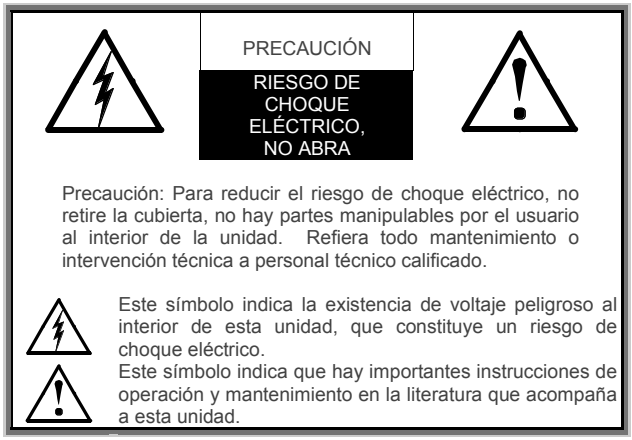
PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO, NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

NOTA

Nos reservemos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

PREMIER®

INSTRUCTION MANUAL
HAIR DRYER
SE-2370IC

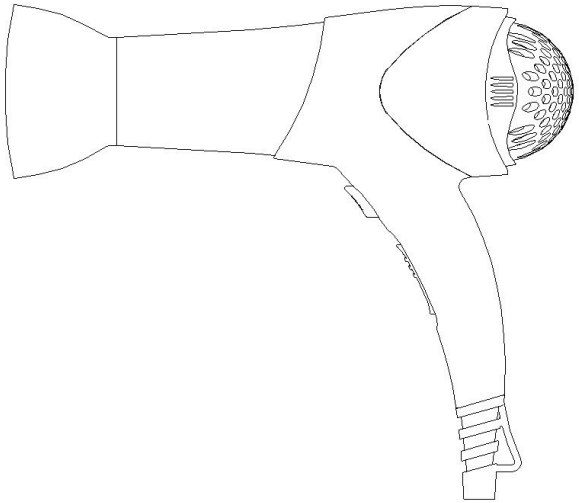

DEAR COSTUMER

Thank you four purchase!
Please read carefully this manual and keep for your future reference.
If you need additional support please write to: ***info@premiermundo.com***

RATED PARAMETERS

Voltage: 120V~
Frequency: 60Hz
Power: 1800W

HOW TO USE YOUR HAIR DRYER

1. Always ensure the switch is set to “0” position before plugging the unit the power outlet.
2. Use the high setting for drying hair, and use low setting for styling.
3. Should the hair dryer stop for any reason, turn it off at once and let it cool down.
4. Adjust the desired blowing strength:

- Position 0: OFF
- Position 1: Half power, medium temperature for gentle drying and styling
- Position 2: Full power, high temperature for quick drying

COOL SHOT

With this switch it is possible to interrupt the heating process so that the air can be mixed according to individual requirements.

IONIC

This appliance is supplied with the device ***IONIC Technology***, which emits negative ions during the drying. It can help to eliminate the electrostatic loads from the hair, to get soft style result

MAINTENANCE

- This hair dryer maintenance is free, no consumption or lubrication is needed.
- Keep this appliance clean for proper operating.
- Never block or clog air intakes, otherwise overheated will be happen.
- The appliance has no user serviceable parts; any other servicing should be performed by an authorized service representative or a professional center.
- Never allow the supply cord to be twisted, pulled, bent, or wrapped around the dryer.
- If the cord is twisted, to untwist the cord before use.
- When not in use, this appliance should be stored in a safe, dry location, out of reach of children.

CLEANING AND CARE

- Always ensure that hair dryer is disconnected from the mains supply before cleaning.
- Use a damp cloth for cleaning and wipe dry. This will help preserve the original finish of your hair dryer.
- Abrasive cleaners should not be used.

NOTE

- Never immerse the hair dryer in water and always ensure that plug is kept dry.
- Frequently clean out any hair or fluff that becomes stuck in the inlet filter.
- To clean the filter, vacuum or dry brunch clean, never immerse the filter in water. Failure to keep filter clean may result in overheating.

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- Always unplug this appliance immediately after using.
- Do not use while bathing.
- Do not place or store appliance where it can fall or be pulled into a tub of sink.
- Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly. If it has been dropped or damaged or dropped into water. Return the appliance to a Service Center for examination and repair.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair etc.
- Never use while sleeping.
- Never drop or insert any object into any opening and hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not direct hot air toward eyes or other heat sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not use near tubs, basins or other vessels containing water.
- 13. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for costumers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

CIRCUIT DIAGRAM/DIAGRAMA DE CIRCUITOS